



中国认可
国际互认
检测
TESTING
CNAS L1842



佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 1 of 9



Applicant Information

Applicant Name : BNX Converting, LLC
Applicant Address : 16727 Park Row, Houston, TX 77084, USA
Manufacturer : BNX Converting, LLC

Sample Information

Sample Description : EF95 Folding Cup Fish Style Earloop Mask (Available in White, Black, Teal, Pink, Light Pink, Yellow, Violet, Red, Navy, Light Blue, Beige, Tan, Brown, Gray.)
Style No. : EF95
Brand : BNX
Sample Quantity : 65 pieces
Size specification : 207mmX85mm
Material Components : 5 layers 1. 60gsm spunbond pp nonwoven 2. 55gsm stiff hardshell pp nonwoven 3. 25gsm meltblown pp nonwoven 4. 25gsm hot air cotton 5. 40gsm spunbond pp nonwoven
- Sample Receiving/Testing date : 2022-12-14
- Report Date : 2022-12-26
- The original sample is stucked on the last paper.

Test Performed

Judgement according to:
GB 2626-2019 Respiratory protection— Non-powered air-purifying particle respirator
- Selected test(s) as requested by applicants. For details, refer to attached page(s).

Pronounce

The results shown in this report refer only to sample(s) tested unless otherwise stated.
All the items are performed in the standard conditions, except the noted cases.
Except for the requirement of the client, this report does not provide the uncertainty of test results.

Signed for and on behalf of
CNTAC Testing Service Co.,Ltd.(Foshan)

Approved by

张荣





中国认可
国际互认
检测
TESTING
CNAS L1842



佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 2 of 9



CONCLUSION

Test Item	Judgement
Basic requirements	Pass
Appearance Inspection	Pass
Filtering Efficiency (salt medium)	Pass
Inward Leakage	Pass
Exhalation Resistance	Pass
Inhalation resistance	Pass
Dead Space	Pass
Visual field	Pass
Head harness	Pass
Flammability	Pass
Functional Performance	Pass





中国认可
国际互认
检测
TESTING
CNAS L1842



佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 3 of 9



Requirements	Test Result	Judgement
1. Basic requirements <u>GB 2626-2019 Section 5.1</u>		
The materials shall meet the following requirements:		Pass
Materials in direct contact with the face shall be harmless to the skin	Accordance	
The filter material shall be harmless to human body	Accordance	
The materials used shall have sufficient strength and shall not be damaged and deformed in normal use	Accordance	
Wear without obvious tenderness or tingling	Accordance	
The structural design shall meet the following requirements:		
It shall not be easy to cause structural damage, and the design, composition and installation of components shall not pose any danger to users	Accordance	
The design of head harness shall be elastic material or adjustable, easy to wear and remove, and it shall be able to firmly fix the face piece on the face, without obvious compression or tenderness	Accordance	
It shall not affect visual field obviously	Accordance	
The structure of the disposable facepiece shall be able to ensure the fit with the face, and should not appear deformation in normal use	Accordance	





中国认可
国际互认
检测
TESTING
CNAS L1842




佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 4 of 9



Test Result	Requirements	Judgement
2. Appearance Inspection <u>GB 2626-2019 Section 6.1 and 6.2</u>		
Result	Accordance	The surface should not be damaged, deformation and other obvious defects. Pass
	Accordance	Component materials and structures shall be able to withstand normal operating conditions and possible temperature, humidity and mechanical shocks.
	Accordance	After temperature and humidity pretreatment and mechanical strength pretreatment, components should not fall off, damage and deformation.
3. Filtering Efficiency (salt medium) <u>GB 2626-2019 Section 6.3</u>		
Air flow:85L/min,Aerosol: NaCl		
Unit: <%>		
Before pretreatment	(KN95) ≥ 95.0	Pass
sample 1#	99.9	
sample 2#	99.9	
sample 3#	99.5	
sample 4#	99.9	
sample 5#	99.9	
sample 6#	99.8	
sample 7#	99.9	
sample 8#	99.9	
sample 9#	99.9	
sample 10#	99.9	
sample 11#	99.9	
sample 12#	99.8	
sample 13#	99.8	
sample 14#	99.8	
sample 15#	99.9	
After pretreatment		
sample 1#	99.8	
sample 2#	99.8	
sample 3#	99.8	
sample 4#	99.8	
sample 5#	99.8	
Minimum	99.5	

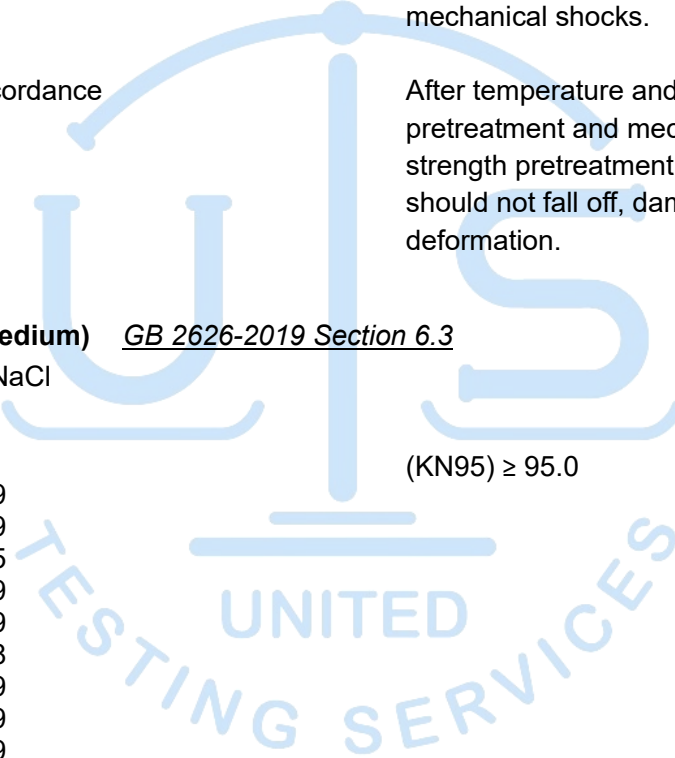



中国认可
国际互认
检测
TESTING
CNAS L1842



佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 5 of 9



Test Result	Requirements	Judgement
-------------	--------------	-----------

4. Inward Leakage GB 2626-2019 Section 6.4

Test Result	Requirements	Judgement
50 out of the 50 individual exercise results for total inward leakage are not greater than 11%.	KN95 At least 46 out of the 50 individual exercise results (i.e. 10subjects x 5 exercise) for total inward leakage shall be not greater than 11%.	Pass
10 out of 10 individual wearer arithmetic means for the total inward leakage are not greater than 8%.	At least 8 out of 10 individual wearer arithmetic means for the total inward leakage shall be not greater than 8%.	

Remark:Detailed test data on appendix page.

5. Exhalation Resistance GB 2626-2019 Section 6.6

Air flow:85L/min			
Unit: <Pa>			
Before pretreatment		≤ 210	Pass
sample 1#	81.1		
sample 2#	82.1		
After pretreatment			
sample 1#	74.6		
sample 2#	76.2		
Maximum	82.1		

6. Inhalation resistance GB 2626-2019 Section 6.5

Air flow:85L/min			
Unit: <Pa>			
Before pretreatment		≤ 210	Pass
sample 1#	90.3		
sample 2#	92.6		
After pretreatment			
sample 1#	82.4		
sample 2#	83.7		
Maximum	92.6		





中国认可
国际互认
检测
TESTING
CNAS L1842



佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157	
Report No: ZFLJ2867785	Page 6 of 9	

Test Result	Requirements	Judgement
-------------	--------------	-----------

7. Dead Space GB 2626-2019 Section 6.9

Unit: <%>

Volume fraction of carbon dioxide 0.3

The volume fraction of carbon dioxide ≤ 1

Pass

8. Visual field GB 2890-2009 section 6.8

Below visual field 54.4°

Below visual field(Half-mask) $\geq 35^\circ$

Pass

Binocular visual field 91.9%

Binocular visual field(Half mask) $\geq 65\%$

9. Head harness GB 2626-2019 Section 6.11

For disposable facepiece, tension 10N for 10s

Before pretreatment No slippage and fracture

No slippage or fracture shall occur

Pass

After pretreatment No slippage and fracture

10. Flammability GB 2626-2019 Section 6.15

Unit: <s>

After flame time

After flame time ≤ 5

Pass

Before pretreatment


sample 1# 0

sample 2# 0

After pretreatment

sample 1# 0

sample 2# 0

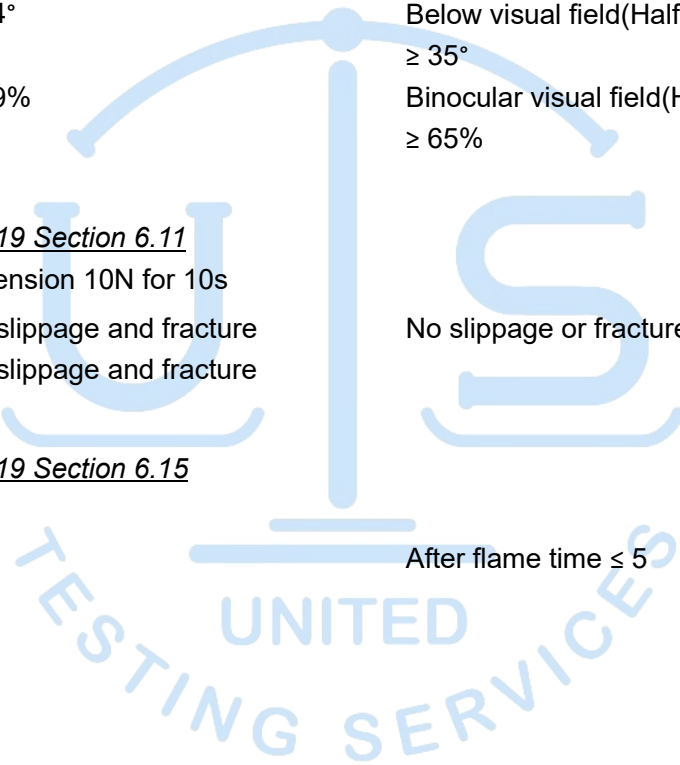



中国认可
国际互认
检测
TESTING
CNAS L1842



佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 7 of 9



11. Functional Performance GB 2626-2019 Section 6.16

Respirator Information		
Model and specification	Model: EF95 Specification: 207mmX85mm	
Brand	BNX	
Manufacturer Information	Manufacturer: BNX Converting, LLC Manufacturer Address: 16727 Park Row, Houston, TX 77084, USA	
Evaluation Report Before testing functional performance, the respirator has completed all laboratory performance tests and is confirmed to be harmless to human subjects.		
Performance category		Evaluation Content
Categories (A) directly related to security	Respiration	Good patency, comfortable air supply, large ventilation.
	Vision	No obvious effect on visual field.
	Security	The head harness is strong.
	Communication Capability	Clear pronunciation, clear hearing, the instructions can be clearly heard, and according to the instructions quickly make the correct response.
	Control Device	High intuitive adjustment, easy to understand, easy to operate, low possibility of misoperation or accidental operation.
	Activity	High freedom degree of head movement.
Categories (B) not directly related to security	Convenience of Use	Convenient to wear, convenient to take off.
	Comfort Degree	Facial comfort, moderate thermal comfort, feel comfortable after use.
	Maintenance and storage	Easy to maintain and store.
	instruction for use	Usage method is easy to understand, maintenance and storage is easy to understand.
	Total evaluation	Acceptable level is moderate.
Judgement		Pass





中国认可
国际互认
检测
TESTING
CNAS L1842



佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 8 of 9



Appendix Page :

Inward Leakage (Disposable mask		Individual exercise 1 TIL (%)	Individual exercise 2 TIL (%)	Individual exercise 3 TIL (%)	Individual exercise 4 TIL (%)	Individual exercise 5 TIL (%)	Mean individual wearer TIL (%)
The sample before pretreatment	Individual wearer 1	4.4	6.7	5.0	7.6	3.3	5.4
	Individual wearer 2	4.4	5.8	5.5	6.4	4.4	5.3
	Individual wearer 3	4.9	8.0	5.9	8.4	3.8	6.2
	Individual wearer 4	4.4	8.0	7.3	9.4	4.4	6.7
	Individual wearer 5	4.6	6.8	5.6	8.7	3.8	5.9
The sample after pretreatment	Individual wearer 6	4.7	5.8	5.0	9.2	4.3	5.8
	Individual wearer 7	4.4	7.8	6.4	8.4	4.5	6.3
	Individual wearer 8	5.0	6.9	5.8	9.0	4.2	6.2
	Individual wearer 9	4.2	6.6	6.6	8.7	4.5	6.1
	Individual wearer 10	5.1	6.1	5.8	6.5	5.0	5.7





中国认可
国际互认
检测
TESTING
CNAS L1842




佛山中纺联检验技术服务有限公司
CNTAC Testing Service Co.,Ltd.(Foshan)

Testing Report	Security website: www.fcl-sz.org.cn Security code: 4302367157
Report No: ZFLJ2867785	Page 9 of 9



Original Sample

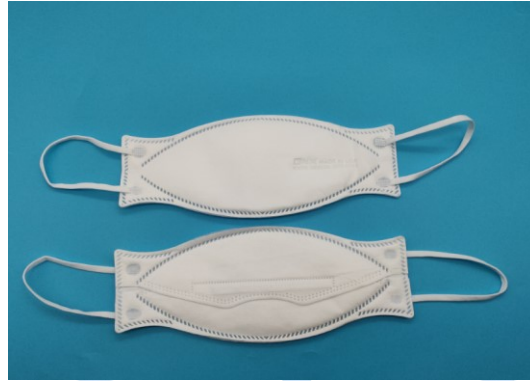

=====**End of Report**=====

